

Telefon: +49 (0)2334 / 9066-0 ■ Fax: +49 (0)2334 / 9066-26 ■ Färberstr. 4 ■ 58119 Hagen - Hohenlimburg

Ersatzteilliste

Betonknacker / Pulverisierer EHP 42



INSTRUCTIONS FOR USE

- This parts manual describes the configuration of the part components of the product and is intended only to assist to order spare parts for maintenance work
- This manual contains no safety information for operating the product or maintenance work. Please observe the safety instructions described in the relevant operation manual.
- The illustrations shown in this manual is not appropriate for workshop instructions, so they should not be used for assembling or disassembling the product. Please refer to the workshop manual for that purpose.
- Use Everdigm genuine parts only.
 Warranties do not cover damages that have been caused or aggravated by use of non-genuine parts.
- For product warranty, please refer to the warranty conditions provided separately.
- The illustrations in this manual show only the overall shapes and positions of the part components so they may not be identical with the actual parts.
- For the purpose of continued product improvement, some information in this manual could be changed without prior notice, and might be differ from your product which was not covered by this publication.
- If you found the information that is unclear or not corresponding with the actual product, contact Everdigm or Everdigm distributor.

How to use this parts manual:

<Example>

RX-20 - CYLINDER UNIT

| Y | Ÿ | 6 | 7 | 8 |
|------------|---|--|--|--|
| PART NO. | PART NAME | QΤΥ | S/N | REMARKS |
| X123-9001 | Cylinder Unit | 2 | | |
| X123-1001 | Cylinder Housing | 1 | | |
| X123-9002 | Rod Cover Ass'y | 1 | | |
| X123-1002 | -Rod Cover | -1 | ~199 | [R X123-1002A] |
| X123-1002A | -Rod Cover | -1 | 200~ | |
| A456-2001 | -Slide Seal | -2 | | [K1] |
| A456-2002 | Seal Ring | 1 | | [K1] [D] |
| A456-2003 | O-Ring | 1 | | [K1] [D] |
| A456-2004 | -Dust Wiper | -1 | | [K1] |
| X123-1003 | Rod | 1 | | |
| X124-1005 | Piston | 1 | | |
| • | • | | | |
| • | • | | | |
| | X123-9001 X123-1001 X123-9002 X123-1002 X123-1002A A456-2001 A456-2002 A456-2003 A456-2004 X123-1003 | X123-9001 Cylinder Unit X123-1001 Cylinder Housing X123-9002 Rod Cover Ass'y X123-1002 -Rod Cover X123-1002A -Rod Cover A456-2001 -Slide Seal A456-2002 Seal Ring A456-2003 O-Ring A456-2004 -Dust Wiper X123-1003 Rod | X123-9001 Cylinder Unit 2 X123-1001 Cylinder Housing 1 X123-9002 Rod Cover Ass'y 1 X123-1002 -Rod Cover -1 X123-1002A -Rod Cover -1 A456-2001 -Slide Seal -2 A456-2002 Seal Ring 1 A456-2003 O-Ring 1 A456-2004 -Dust Wiper -1 X123-1003 Rod 1 | X123-9001 Cylinder Unit 2 X123-1001 Cylinder Housing 1 X123-9002 Rod Cover Ass'y 1 X123-1002 -Rod Cover -1 ~199 X123-1002A -Rod Cover -1 200~ A456-2001 -Slide Seal -2 A456-2002 Seal Ring 1 A456-2003 O-Ring 1 A456-2004 -Dust Wiper -1 X123-1003 Rod 1 |

1. Model name: Identification name of the product

2. Title: Title name of the assembly shown in the page



3. Item: Key number which shows the referring number of the part in corresponding illustration.

For a revised part which replaces the old one with same item number, the item is not shown.

Item numbers are not always in sequence.

+.... Represent the title assembly containing the entire part in the illustration.

* with the same item number..... Represent selectable parts depending on product version.

4. Part No.: Identification number of the part or assembly.

The part number might be omitted when the part cannot be supplied separately.

5. Part Name: Part name of the part.

The parts without a prefix in front of the part name are independent component parts or subassemblies belong to the title assembly in corresponding list.

Prefix '-'.... The parts marked with the prefix '-' in front of the part name are component parts

belong to the subassembly shown above of the rows of these parts.

Prefix '--'... The parts marked with the prefix '--' are component parts of the '-' marked

subassembly containing these parts.

6. Qty: Quantity used for one unit of their parent assembly containing the parts.

When the quantity of the title assembly is blank, refer to the page shown with '▶', but when it is

not blank, it represents the quantity used for one unit of the product.

For the parts with the prefix '-' or '--' in front of their part name, the quantity is expressed with that

prefix.

AR... As many as required (variable quantity depending on the product)

7. S/N: Serial number of the product which those parts are applied

Parts without serial no. indications are used in every product regardless of serial number.

8. Remarks: Supplementary comment. Refer to the following for the code within [].

A..... The parts with this code can be used interchangeably with each other.

R..... The part with this code is no longer manufactured as a result of a revision and replaced by

the new part whose part number follows this code.

 $K..... \label{eq:K.m.} The part with this code is contained in the service kit whose item number follows this code.$

D..... The part with this code cannot be supplied separately. The assembly part containing this

part should be ordered.

S..... Non-standard part which can be supplied by separate order

How to order parts:

Please note the full model name and serial number of your product. This code can be found on the nameplate of your product. Compare the parts to order with the corresponding parts in the drawings in this parts manual and note the part numbers to order.

When ordering parts, please specify detail part names as shown in the following example,

Model name of product:
Serial number:
135
Part No.:
A123-4567
Part name:
Quantity:
Purchaser's name & address:



TABLE OF CONTENTS

| INSTRUCTIONS FOR USE | 2 |
|----------------------|----|
| | |
| | |
| Pulverizer Ass'y | |
| Main Ass'y | |
| Speed-up Valve | 11 |
| Cylinder Ass'y | |
| Parts for Mounting | 15 |
| Seal Kit | 17 |
| Shims | 18 |
| Maintenance Tool Kit | 19 |
| Notes | 21 |

© 2021 Everdigm Corp. All rights reserved.


This manual is copyrighted by Everdigm Corp. with all rights reserved in accordance with prevailing law. It is positively prohibited to use or reproduce its contents in whole or in part without prior written permission.




BLANK PAGE



Pulverizer Ass'y

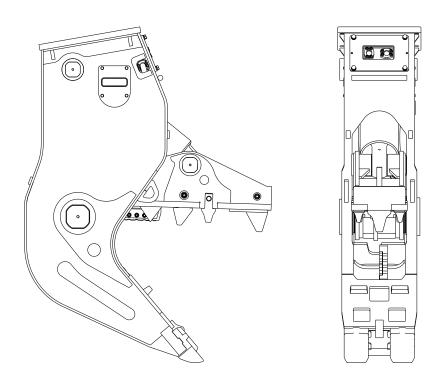


Mounting Dimensions

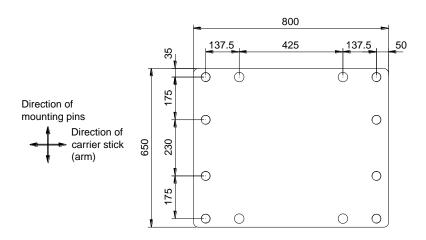

Unit: mm

42-PVAS-01E-01



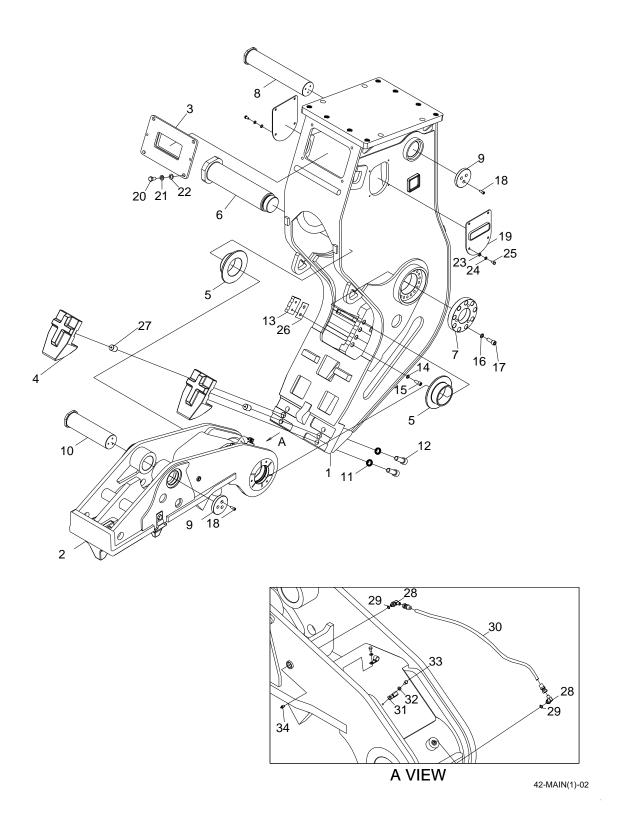


EHP42 – Main Ass'y (1/2)

| ITEM | PART NO. | PART NAME | QTY S / N | REMARKS |
|------|---------------|------------------|-----------|-----------------|
| + | AP420-0001 | MAIN ASS'Y | 1 | [R AP420-0001A] |
| + | AP420-0001A | MAIN ASS'Y | 1 | |
| 1 | AP420-0002 | BODY | 1 | [R AP420-0002A] |
| | AP420-0002A | BODY | 1 | |
| 2 | AP420-0054 | JAW ASS'Y | 1 | |
| 3 | AP420-0050 | COVER ASSY | 1 | |
| 4 | AP420-0093 | TOOTH | 2 | [R AP420-0107] |
| | AP420-0107 | TOOTH | 2 | |
| 5 | AP420-0098 | BUSH | 2 | |
| 6 | AP420-0099 | PIN | 1 | |
| 7 | AP420-0100 | COVER | 1 | |
| 8 | AP420-0101 | PIN | 1 | |
| 9 | P202-5020 | PIN COVER | 2 | |
| 10 | AP420-0102 | PIN | 1 | |
| 11 | A015-0003D30 | DISK LOCK WASHER | 8 | |
| 12 | S2239871 | SOCKET BOLT | 8 | |
| 13 | C300-4602 | CUTTER BLADE | 2 | |
| 14 | A015-0003D016 | DISK LOCK WASHER | 4 | |
| 15 | S2221471 | SOCKET BOLT | 4 | |
| 16 | S5111112 | SPRING WASHER | 9 | |
| 17 | S2227671 | SOCKET BOLT | 9 | |
| 18 | S2215261 | SOCKET BOLT | 6 | |
| 19 | AC204-0085 | COVER ASS'Y | 1 | |
| 20 | S0127461 | HEX BOLT | 4 | |
| 21 | S5101111 | SPRING WASHER | 4 | |
| 22 | S5011113 | PLAIN WASHER | 4 | |
| 23 | S5010713 | PLAIN WASHER | 8 | |
| 24 | S5100711 | SPRING WASHER | 8 | |
| 25 | S0115063 | HEX BOLT | 8 | |
| 26 | C300-4711D0 | SHIM | AR | |
| 27 | P202-5043 | LOCK PIN | 2 | |
| 28 | H002-0014D001 | ELBOW | 2 | |
| 29 | S8000111 | O-RING | 2 | [K1] |
| 30 | H001-0016D058 | HOSE | 1 | |
| 31 | 2124-1509D002 | CLIP | 2 | |
| 32 | S5100513 | SPRING WASHER | 2 | |
| 33 | S0108663 | HEX BOLT | 2 | |
| 34 | S6710041 | GREASE NIPPLE | 1 | |
| | | | | |




EHP42 – Main Ass'y (2/2)

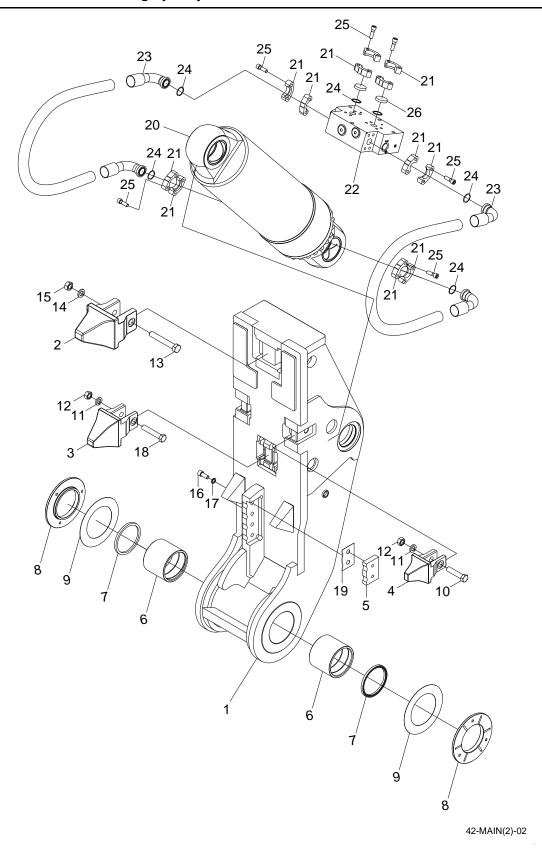

EHP42 – Main Ass'y (2/2)

| ITEM | PART NO. | PART NAME | QTY S / N | REMARKS |
|------|---------------|------------------|-----------|-----------------|
| + | AP420-0001 | MAIN ASS'Y | 1 | [R AP420-0001A] |
| + | AP420-0001A | MAIN ASS'Y | 1 | |
| 1 | AP420-0053 | JAW | 1 | |
| 2 | AC400-0234 | TOOTH | 1 | |
| 3 | P202-4011B | TOOTH | 1 | |
| 4 | P202-4009B | TOOTH | 2 | |
| 5 | C300-4602 | CUTTER BLADE | 2 | |
| 6 | AP420-0087 | BUSH | 2 | |
| 7 | AA054-0023 | DUST SEAL | 2 | [K1] |
| 8 | AP420-0088 | WEAR-RING | 2 | |
| 9 | AP420-0089 | SHIM | AR | |
| 10 | S0173161 | HEX BOLT | 2 | |
| 11 | S5101211 | SPRING WASHER | 3 | |
| 12 | S4013241 | HEX NUT | 3 | |
| 13 | S0176263 | HEX BOLT | 1 | |
| 14 | S5101313 | SPRING WASHER | 1 | |
| 15 | S4013341 | HEX NUT | 1 | |
| 16 | S2221471 | SOCKET BOLT | 4 | |
| 17 | A015-0003D016 | DISK LOCK WASHER | 4 | |
| 18 | S0173571 | HEX BOLT | 1 | |
| 19 | C300-4711Do | SHIM | AR | |
| 20 | AP420-0043 | CYLINDER ASS'Y | 1 | |
| 21 | 2181-9086 | SPLIT FLANGE | 12 | |
| 22 | AP420-0094 | SPEED UP VALVE | 1 | |
| 23 | H001-0030D054 | HOSE | 2 | |
| 24 | A051-2222 | O-RING | 6 | [K1] |
| 25 | S2218561 | SOCKET BOLT | 24 | |
| 26 | A081-0021 | FLANGE CAP | 2 | |
| | | | | |



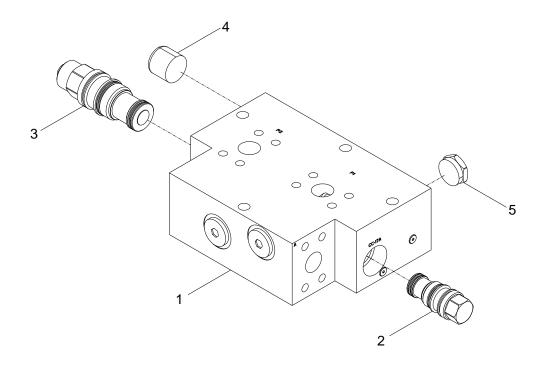


42-SPVV_01

EHP42 – Speed-up Valve

| ITEM | PART NO. | PART NAME | QTY S / N REMARKS | |
|------|------------|-----------------------|-------------------|--|
| + | AP420-0094 | SPEED UP VALVE | 1 | |
| 1 | AX000-1960 | VALVE BLOCK | 1 | |
| 2 | AC430-0080 | PILOT CHECK VALVE | 1 | |
| 3 | AC430-0079 | COUNTER BALANCE VALVE | 1 | |
| 4 | AX000-1747 | CAVITY PLUG | 1 | |
| 5 | AX000-1746 | CHECK VALVE | 1 | |



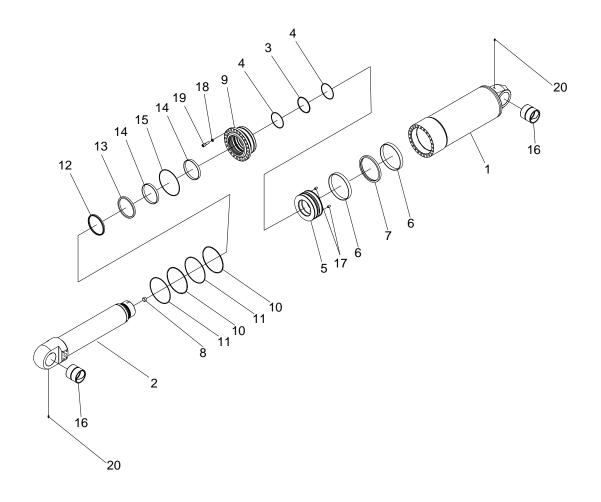

45R-CYLA-1_01





EHP42 – Cylinder Ass'y

| ITEM | PART NO. | PART NAME | QTY S / N | REMARKS |
|------|------------|-----------------------|-----------|---------|
| + | AP420-0043 | CYLINDER ASS'Y | 1 | |
| 1 | AP420-0044 | TUBE ASS'Y | 1 | |
| 2 | AP420-0047 | ROD | 1 | |
| 3 | S8001401 | O-RING | 1 | [K2] |
| 4 | S8061400 | BACK UP-RING | 2 | [K2] |
| 5 | C300-3104A | PISTON | 1 | |
| 6 | A059-0006 | WEAR-RING | 2 | [K2] |
| 7 | A056-0026 | PISTON SEAL | 1 | [K2] |
| 8 | S5810060 | PLUG | 1 | |
| 9 | AP420-0048 | ROD BUSH | 1 | |
| 10 | S8012401 | O-RING | 2 | [K2] |
| 11 | S8092400 | BACK UP-RING | 2 | [K2] |
| 12 | A054-0017 | WIPER | 1 | [K2] |
| 13 | A053-0102 | U-RING | 1 | [K2] |
| 14 | A059-2017 | WEAR-RING | 2 | [K2] |
| 15 | A056-0078 | STEP SEAL | 1 | [K2] |
| 16 | AP420-0049 | BUSH | 2 | |
| 17 | S3527707 | SET SCREW | 2 | |
| 18 | S5110911 | SPRING WASHER | 24 | |
| 19 | S2221771 | SOCKET BOLT | 24 | |
| 20 | S6710042 | GREASE NIPPLE(A Type) | 2 | |



  
Fasteners Set for Mounting Adapter





Standard Mounting Adapter & Mounting Pin Set

Unit: mm

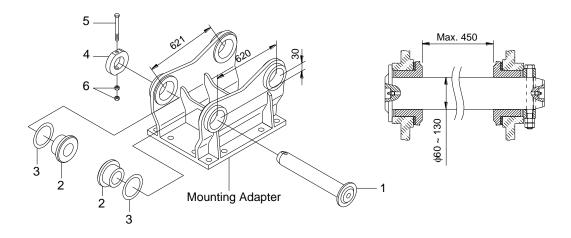

45T-PFMT-1-E



EHP42 – Parts for Mounting

| ITEM | PART NO. | PART NAME | QTY | S / N | REMARKS |
|------|----------|-----------|-----|-------|---------|
| | | | | | |

Fasteners Set for Mounting Adapter

| | AC450-0040 | ADAPTER FASTENERS SET | 1 | |
|---|------------|-----------------------|----|-----------------|
| 1 | S0184063 | HEX BOLT | 8 | M36x4xL160-10.9 |
| 2 | S0145463 | HEX BOLT | 4 | M36x4xL110-10.9 |
| 3 | S5101713 | SPRING WASHER | 20 | M36(TYPE 1) |
| 4 | S4013743 | HEX NUT | 8 | M30x4-10 |

Standard Mounting Adapter

|--|

Mounting Pin Set

| | B280-9950Do | MOUNTING PIN SET | 2 | 2 sets / unit |
|---|-------------|------------------|----|-----------------|
| 1 | B280-9952Do | BRACKET PIN | 1 | |
| 2 | B280-9957Do | SPACER | 2 | |
| 3 | B280-9956Do | SHIM | AR | |
| 4 | B280-9955Do | STOP RING | 1 | |
| 5 | S0167261 | HEX BOLT | 1 | M16x2xL170-10.9 |
| 6 | S4012942 | HEX NUT | 2 | M16x2-10-Style2 |

Notes

The parts with 'Do' at the end of their parts numbers are should be selected properly according to your carrier. Please contact Everdigm or our distributor before ordering parts of the mounting pin set.

Hoses for Adapter-Mount Type

| 1 | H001-0015D009 | HOSE | 2 | FH1-1/4-ORFS20-P350-L2000 |
|---|---------------|-----------|---|------------------------------|
| 1 | H001-0015D001 | HOSE | 2 | FH1-1/4-ORFS20-P350-L2300 |
| 2 | A051-0252 | O-RING | 2 | AS568-025-HsA90 |
| 3 | A051-2222 | O-RING | 2 | AS568-222-HsA90 (for Flange) |
| 4 | H002-0004D001 | CAP | 2 | ORFS20 |
| 5 | A061-0026D4 | HOSE PLUG | 1 | ORFS20 |

Notes
When ordering hoses, check the type of hose connection of carrier and proper length of hoses before choosing the hoses. Special hoses with other connection types or other hose lengths are also available on request.



EHP42 - Seal Kit

| ITEM | DART NO | DADT NAME | QTY S / N | DEMARKS |
|------|------------|-----------------------|-----------|-------------------------|
| IIEW | PART NO. | PART NAME | QTY S / N | REMARKS |
| | - | | | |
| K1 | AC420-0084 | SEAL KIT (MAIN ASS'Y) | 1 | Seal Kit for Main Ass'y |
| 1 | S8000111 | -O-RING | -2 | |
| 2 | AA054-0023 | -DUST SEAL | -2 | |
| 3 | A051-2222 | -O-RING | -6 | |
| | | | | |
| K2 | AC450-0111 | SEAL KIT (CYLINDER) | 1 | Seal Kit for Cylinder |
| 1 | S8001401 | -O-RING | -1 | |
| 2 | S8061400 | -BACK UP-RING | -2 | |
| 3 | A059-0006 | -WEAR-RING | -2 | |
| 4 | A056-0026 | -PISTON SEAL | -1 | |
| 5 | S8012401 | -O-RING | -2 | |
| 6 | S8092400 | -BACK UP-RING | -2 | |
| 7 | A054-0017 | -WIPER | -1 | |
| 8 | A053-0102 | -U-RING | -1 | |
| 9 | A059-2017 | -WEAR-RING | -2 | |
| 10 | A056-0078 | -STEP SEAL | -1 | |



EHP42- Shims


| ITEM | PART NO. | PART NAME | QTY | S / N | REMARKS |
|---------------|----------------|------------|-----|-------|-------------------|
| Shims for Jaw | | | | | |
| | AP420-0089D001 | SHIM (0.3) | | | Thickness: 0.3 mm |
| | AP420-0089D002 | SHIM (0.5) | | | Thickness: 0.5 mm |
| | AP420-0089D003 | SHIM (1.0) | | | Thickness: 1.0 mm |
| | AP420-0089D004 | SHIM (0.2) | | | Thickness: 0.2 mm |

Shims for Cutter Blades


| + | C300-4711 | SHIM | |
|----|-----------|------------|-------------------|
| Do | 001 | SHIM (0.1) | Thickness: 0.1 mm |
| | 002 | SHIM (0.2) | Thickness: 0.2 mm |
| | 003 | SHIM (0.3) | Thickness: 0.3 mm |
| | 004 | SHIM (0.5) | Thickness: 0.5 mm |
| | 005 | SHIM (1.0) | Thickness: 1.0 mm |




Standard Tools

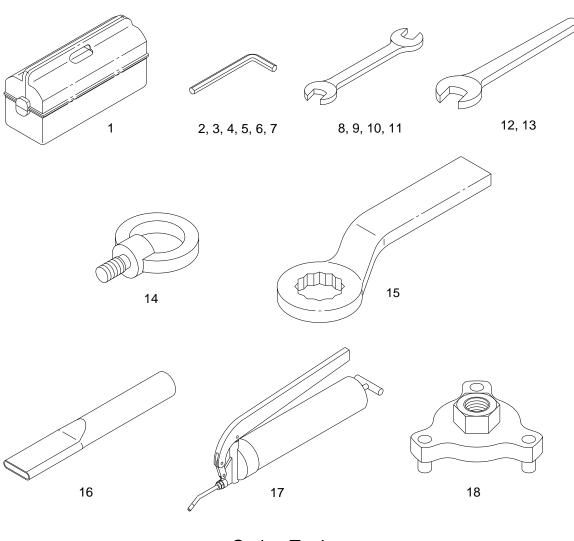

Option Tools

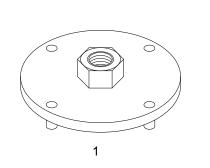

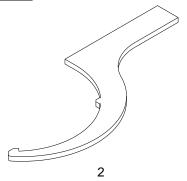

42-TOOL-2

EHP42– Maintenance Tool Kit

| ITEM PART NO. PART NAME QTY S / N | REMARKS |
|-----------------------------------|---------|
|-----------------------------------|---------|

Standard Tool Kit

| + | AC420-0085 | EHP42 TOOL KIT | 1 |
|----|------------|-------------------------|---|
| 1 | 2199-9004 | TOOL BOX | 1 |
| 2 | T6550007 | L-WRENCH 6 | 1 |
| 3 | T6550011 | L-WRENCH 10 | 1 |
| 4 | T6550013 | L-WRENCH 12 | 1 |
| 5 | T6550015 | L-WRENCH 14 | 1 |
| 6 | T6550018 | L-WRENCH 17 | 1 |
| 7 | T6550022 | L-WRENCH 22 | 1 |
| 8 | T6510071 | SPANNER 14x17 | 1 |
| 9 | T6510075 | SPANNER 19x22 | 1 |
| 10 | T6510081 | SPANNER 24x27 | 2 |
| 11 | T6510087 | SPANNER 30x32 | 2 |
| 12 | T6510025 | SPANNER 36 | 2 |
| 13 | T6510028 | SPANNER 46 | 1 |
| 15 | A090-0031 | RING WRENGH 55 | 1 |
| 16 | 2199-1005 | PIPE | 1 |
| 17 | 2199-9008 | GREASE GUN | 1 |
| 18 | C200-8002A | ADJUST NUT JIG (PCD155) | 1 |

Option Tools

| 1 | A090-0034D003 | PISTON JIG | AR | for cylinder maintenance |
|---|---------------|-------------|----|--------------------------|
| 2 | A090-0033D004 | HOOK WRENCH | AR | for cylinder maintenance |









Moers Baumaschinen GmbH & Co. KG - Färberstr. 4 - 58119 Hagen - Tel.: 02334 / 90 66 - 0 Fax 02334 / 90 66 - 26

info@moers-baumaschinen.de www.moers-baumaschinen.de